


3/4" Lifting Insert - 4 (Typ) ◆ (To be patched in field by others)





Notes:

Casting Method: Wet Cast
Pouring Method: 2 Pour Method
1st pour Stairs
2nd pour Curbs
5000 Psi concrete at 28 days
Non Slip surface on Treads
All Steps to have a 1% min,
Positive Pitch In Field
Step Weight = Width x 715 lb.
Ex: 10' wide = 10 x 715 = 7150lb.

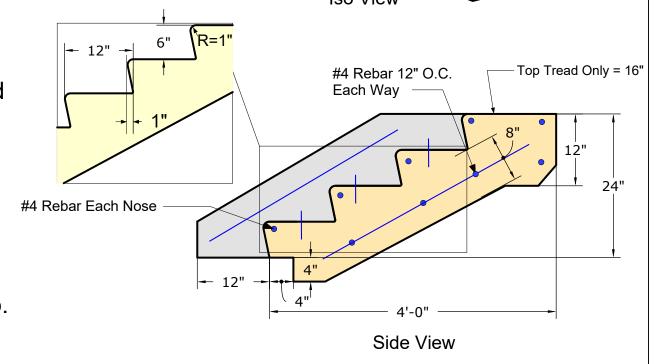

ATLAS CONCRETE PRODUCTS

www.AtlasConcrete.com

65 Burritt St. New Britain CT 06053 800-774-1112 860-224-2244 860-224-2255 Fax



4 Rise Custom
Banking Step with Curbs

Available in widths from 4' wide to 10' wide